



# WELCOME TO WORLD-OF-SATELLITE.COM HOME OF THE RENOWNED VIX TEAM



## How to flash a Technomate TM-Twin 4K.

### What you need before we start: -

- 1) A USB stick formatted to FAT32. (Preferably genuine Kingston and no larger than 8GB in size to prevent compatibility issues while flashing the image).
- 2) Image of your choice.
- 3) Compression software such as 7zip.
- 4) HP Format tool (not essential but recommended).
- 5) Teracopy (not essential but recommended).

For this tutorial we will be using OpenViX 5.0, which can be downloaded from [www.openvix.co.uk](http://www.openvix.co.uk)

1. Format a USB stick to FAT32.
2. Download the image of your choice and extract it to your desktop.
3. Open the folder you extracted to your desktop, for example `openvix-5.0.001.release-tmtwin4k_usb.zip`, you will see another folder named `update`, this is the image file. Copy the entire `update` folder directly to the root of your USB stick.

### Flashing the Receiver.

- 1) Power off the receiver
- 2) Ensure receiver is connected to TV.
- 2) Ensure no other USB devices are plugged into the receiver while flashing.
- 3) Insert the USB stick containing the image files into one of the USB ports on the receiver, rear USB port is advised if possible.
- 4) Power the receiver on.
- 5) When the receiver powers up you will see a message on TV screen.
- 6) As soon as you see the message press the STANDBY button on the front of the receiver to start the flashing process.
- 7) When the flashing process has completed the receiver will automatically reboot.
- 8) Remove USB stick that contains the images files.

The flashing process should take approximately two to four minutes to complete, while the receiver is being flashed, it is important that you **DO NOT** power the receiver down for any reason as this can cause serious and or permanent damage.

If the receiver bypasses the flash files on the USB stick and boots into the existing image instead you may need to check that the file structure is correct on the USB stick or try formatting the USB stick using the above mention HP Format tool or try and alternative USB stick.

Links to software mentioned in guide below: -

7zip <http://www.7-zip.org/>

Teracopy <http://codesector.com/teracopy>

HP format tool <http://www.pcworld.com/product/946261/hp-usb-disk-storage-format-tool.html>

This tutorial was brought to you by ©world-of-satellite.co.uk in association OpenViX and world-of-satellite.com.